Congratulations on the purchase of your new Cordless Sweeper

Get charged up and ready to clean with a replacement **battery pack**

*A savings of **35%** off the regular price of $19.99 + S&H*

Visit www.sharkvac.com Today to Order!

OR CALL US AT 1-800-798-7398 OR USE THE FORM BELOW

Name: _____

Address: _____

City: _____

State: _____ Zip: _____

Phone number: (_____) _____

E-mail: _____

Credit Card Type (Circle one):

Visa MasterCard Amex Discover

Credit Card #: _____ Exp. Date: _____

Or make your check/money order payable to **EURO-PRO OPERATING LLC**

Description	Qty	Price
Battery Pack (X1725QN)	1	$12.95
Shipping/Handling		$4.95
TOTAL		**$17.90**

Add applicable sales tax for AL, CA, MA, MI, NY.

Mail this form along with payment to:

Shark Sweeper Batteries
15820 Euclid Ave.
Chino, CA 91708

Copyright © *EURO-PRO* OPERATING LLC 2008

IMPORTANT

Shark CORDLESS

Cordless Sweeper
Barredora inalámbrica

Model/Modelo: V1935Q
4.8 Volt/ Voltios DC/CC

To Maximize the life of your NiCd batteries:

1. **<u>Charge for a minimum of 20 hours before initial use</u>.** Failure to do so will reduce the product's battery life significantly.
2. Do not store unit with the charging adapter attached and plugged in.
3. Only recharge when the batteries are fully discharged (or as close to fully discharged as possible).
4. Do not store in areas of high temperature or humidity.
5. After 3 months of non-use, the product should be fully discharged and then recharged to maximize battery power.
6. Use only the charger supplied with the product. If other chargers are used, the batteries can fail causing damage to the battery, product, or personal property.

NiCd batteries have a long useful life but at some time they will need to be replaced. To purchase replacement batteries, call 1 (800) 798-7398.

NOTE:
1. The on/off switch must be in the "off" position in order to charge the unit. If the charging indicator does not light, depress the on/off switch once.
2. If the product has never been used or has been stored for an extended period of time without use – it will take several complete charge and discharge cycles to realize the full operational time of your product.

EURO-PRO Operating LLC
Boston, MA, 02465
Tel.: 1 (800) 798-7398

EURO-PRO

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following

WARNING: To reduce the risk of fire, electrical shock, or injury:

1. Do not charge this unit outdoors.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. Do not use cordless sweeper if it has been dropped, damaged, left outdoors, or dropped in water. Return it to ***EURO-PRO Operating LLC*** for examination, repair or adjustment.
6. Do not abuse the charger cord. Never carry the charger or base by the cord or yank to disconnect from an outlet; instead grasp the charger and pull to disconnect.
7. Keep charger cord away from heated surfaces.
8. This product includes rechargeable nickel cadmium batteries. Batteries must be recycled or disposed of properly. **Do not incinerate batteries or expose to high temperatures**, as they may explode.
9. Do not handle plug or appliance with wet hands.
10. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. Do not attempt to change accessories while unit is running.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Read and follow all label, operational and marking instructions.
17. Do not use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard (120V., 60Hz) electrical outlet.
18. **Do not use the cordless sweeper without dust container in place.**
19. Store the cordless sweeper indoors. Store after use to prevent accidents.
20. Leaks from battery cells can occur under extreme conditions. If the liquid, which is 20-35% solution of potassium hydroxide, gets on the skin - wash immediately with soap and water or neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.
21. Use only on dry, indoor surfaces.
22. Do not use for any purpose other than described in this user's guide.
23. Do not attempt to use the charger with any other product or attempt to charge this product with another charger. **Use only charger model KA12D075015023U supplied with this appliance.**
24. The appliance must be disconnected from the supply when removing the battery.

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR CORDLESS SWEEPER.

FOR HOUSEHOLD USE ONLY

Rev. 08/08

PARTS AND COMPONENTS

1. **Sweeper Power Head**
2. **On/Off Switch**
3. **Charging Light Indicator**
4. **Dust Cup (Container)**
5. **Rotating Brush**
6. **Transparent Brush Cover**
7. **Lower Handle**
8. **Lower Handle Extension Tube**
9. **Folding Pivot**
10. **Upper Handle**
11. **Charging Adapter**
12. **Charging Jack**

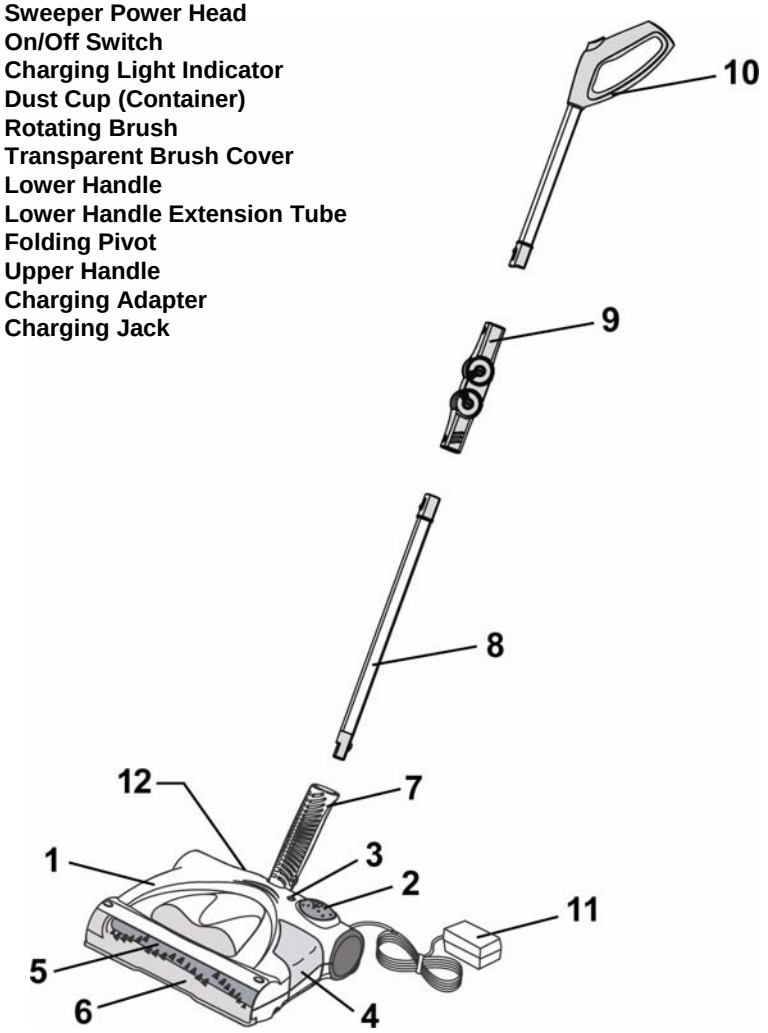

***Illustrations may differ from actual product.**

NOTE: Cordless Sweeper Model V1935Q is shipped with the batteries uncharged. Charging of the unit for 20 hours prior to first use is required. Use replacement battery #X1725QN only.

Assembling your Cordless Sweeper

Before you start:
Your Cordless Sweeper will require very little assembly. You should remove it from the carton and familiarize yourself with all the components listed per the exploded view drawing (pg.2). This will help you in the assembly and operation of your cordless sweeper.

NOTE: The charging adapter may be shipped inside the dust cup.

1. Insert the lower handle onto the power head. Fasten it with the captive nut and bolt provided. (Fig. 1) The captive nut and bolt are found secured to the end where the lower handle will be inserted.

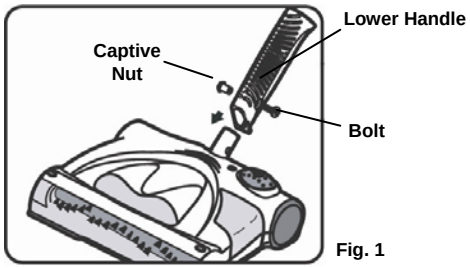

Fig. 1

2. Assemble the handle by inserting the lower handle extension tube into the lower handle. Push until you hear it snap into place. Next, push the plastic folding pivot onto the lower handle extension tube until you hear it snap into place. Finally, insert the upper handle into the forward folding until you hear it snap into place. (Fig. 2)
3. Place the handle into the upward storage position.
4. Plug the charging adapter into the sweeper power head charging jack. Plug the charging adapter cord into a standard electrical outlet (120V., 60Hz.) The green charging indicator light should illuminate. If the charging indicator does not illuminate, depress the on/off switch once to reset the unit.

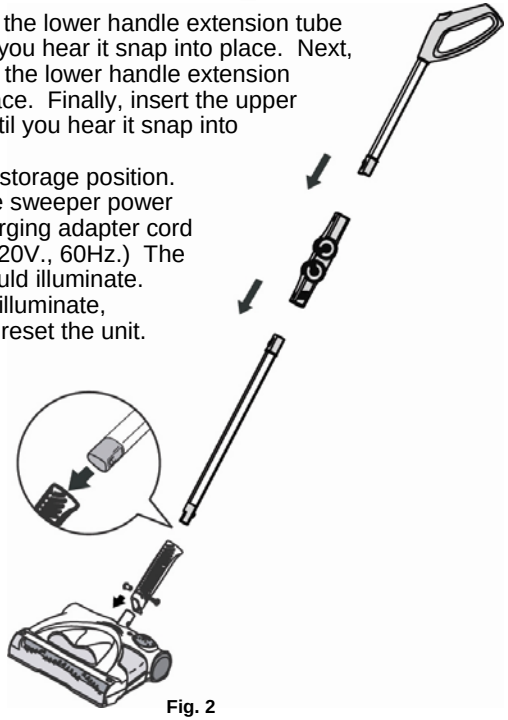
Fig. 2

CAUTION: ALWAYS USE ADAPTOR SUPPLIED (ONLY) WITH SWEEPER.

How to Operate Your Cordless Sweeper

NOTE: Before using, please ensure that the cordless sweeper has been initially charged for 20 hours.
Your cordless sweeper will only operate properly when the batteries are fully charged. Your sweeper will operate for varying lengths of time on a full charge. This will depend upon the type of surface being cleaned. (Longer operating time on bare floors vs carpets.)

1. Push the on/off switch to operate the unit. To turn “Off”, press switch again. (Fig. 3)

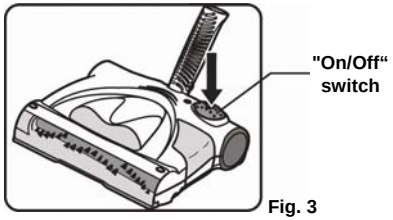

Fig. 3

CAUTION: Any electronic or electrical appliance should not be stored in or exposed to areas of high heat or humidity. Do not store your cordless sweeper close to stoves, radiators, furnaces or in a bathroom or bathing area.

2. To fold the handle, press on the handle release button while bending the handle forward. The folding pivot will click into the bent position. (Fig. 4)
3. To straighten the handle, simply lift the upper handle. The folding pivot will click into the straightened position. (Fig. 5)

Fig. 4

Fig. 5

Cleaning the Dust Container

For best performance, empty the dust container after each use.

1. Pull the dust container straight out from the side. (Fig. 6)

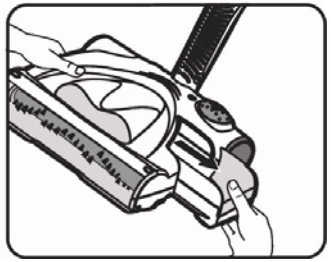

Fig. 6

2. Empty dust container contents. (Fig. 7) If desired, rinse with water to clean the dust container - but dry thoroughly before replacing on the sweeper.

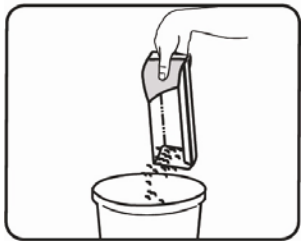

Fig. 7

3. Replace dust container on cordless sweeper.
4. Periodically remove the transparent brush cover on the front of the cordless sweeper and remove any build up of lint, hair or fiber on the rotating brush. To remove the cover - grip the cover from the bottom, pull out and downward until the cover unlocks from the side slots and tabs located on the top of the sweeper. (Fig. 8)

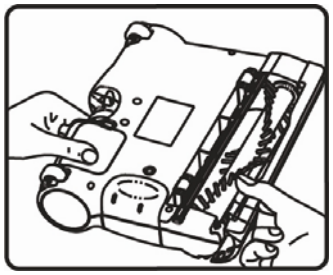

Fig. 8

CAUTION: Do not accidentally turn unit "On" while cleaning.
Do not clean while unit is charging.

Charging the Cordless Sweeper

1. Connect the charger plug to the charging jack or hole on the back of the sweeper. Plug the charging adapter into the wall outlet. (120V., 60Hz.) Use only charger KA12D075015023U. (Fig. 9)
2. This cordless sweeper is powered by Ni-Cd batteries. Before first use, they must be charged for a minimum of 20 hours.

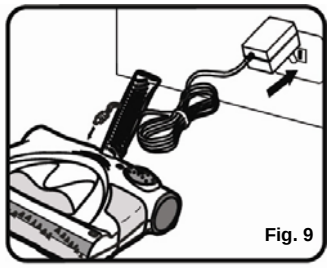

Fig. 9

IMPORTANT: After initial charging, your new cordless sweeper should not be left connected to the charging adapter for a period in excess of 24 hours. A normal charge cycle is approximately 20 hours. The manufacturer recommends that when charging the cordless sweeper, the unit be allowed to charge for approximately 20 hours and then be disconnected from the charging adapter. The charging adapter should be unplugged from the wall receptacle and stored in a convenient place until next use.

3. When recharging the unit, the on/off switch must be in the "Off" position.
4. The charging light indicator on the top of the sweeper will illuminate to indicate that the sweeper is charging.
5. To recharge, repeat step #1 above. Charging times will vary depending upon the amount of usage between charging cycles.

NOTE: If you place the sweeper to recharge and the charging indicator light does NOT illuminate, then press the on/off button once to turn the sweeper "Off". The charging indicator light should now light up.

NOTE: Peak performance may only be realized after the unit has been charged and discharged two (2) or three (3) times.

IMPORTANT: To maintain peak performance of your cordless sweeper, it is recommended that the unit be fully discharged, then completely re-charged at least once a month.

CAUTION: Use only with the battery pack supplied with the unit.
Do not attempt to remove the battery pack from the unit to charge it.
Never attempt to throw the battery pack or unit into a fire or incinerate it.
Do not attempt to remove or damage the battery casing.
Battery must be recycled or disposed of properly at the end of its service life.

To Maximize the Life of Your NiCd Batteries

1. Charge for a minimum of 20 hours before initial use. Failure to do so will reduce the product's battery life significantly.
2. Do not store the unit with the charging adaptor attached and plugged in.
3. Only recharge when the batteries are fully discharged (or as close to fully discharged as possible).
4. Do not store in areas of high temperature or humidity.
5. After three (3) months of storage, the product should be fully discharged and then recharged to maximize battery power.
6. Use only the charger supplied with the product. If other chargers are used, the batteries can fail causing damage to the battery, product or personal property. NiCd batteries have a long useful life but at some time they will need to be replaced. To purchase replacement batteries call Customer service at 1 (800) 798-7398.

NOTE:

1. **The on/off switch must be in the "Off" position in order to charge the unit. If the charging indicator does not light, depress the on/off switch once.**
2. **If the product has never been used or has been stored for an extended period of time without use – it will take several complete charge and discharge cycles to realize the full operational time of your product.**

Battery Removal & Disposal

NOTE: If uncertain as to how to remove your battery pack, we suggest you take your sweeper to a reputable small appliance service technician to have this service performed.

This sweeper is equipped with Ni-Cd batteries and you need to dispose of them properly. When the batteries are no longer good for use, they must be removed from the sweeper for disposal. Do not remove the batteries for any reason other than disposal of them. The batteries must be recycled or disposed of in accordance with local regulations. Please consult your Yellow Pages or local recycling center for more information.

WARNING: **You must never use ordinary batteries for replacement as these may leak and cause damage. Use only battery pack X1725QN provided for replacement.**

Removal of Battery Pack

1. Turn unit over so that the base is facing upwards. Be careful not to turn the unit "On". (Fig. 10)
2. Push in locking tab and lift off battery compartment cover. (Fig. 11)
3. Lift out battery pack, disconnect battery connector and set the battery aside.
4. Connect battery connector and insert the new battery pack into unit. Replace the battery compartment cover making certain that the locking tab snaps in place.

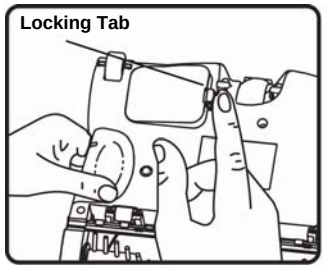

Fig. 10

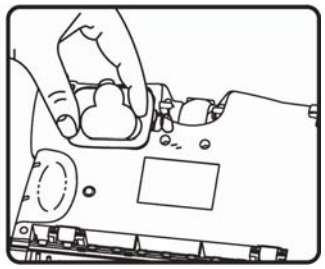

Fig. 11

CAUTION: This appliance contains Ni-Cd batteries. The batteries must be recycled or disposed of in accordance with local regulations. Please consult your Yellow Pages or local recycling center for more information.

Care and Maintenance

To improve the performance and life of your unit, we recommend you do the following:

1. Once a month clean the unit with a dry cloth, including the chamber which the dust container fits into. Remove any hair, fiber or other materials that may have built up in the chamber, on the rotating brush.
2. Don't use abrasive materials to clean the sweeper. Do not immerse the unit in water.
3. Do not pick up liquids or use on wet floors.
4. Do not use on concrete, tar or similar rough surfaces .
5. Don't pick up pieces of string or fabrics with the sweeper.
6. Do not clean tasseled or frayed carpets with the sweeper.
7. Any other servicing should be done by an authorized representative. Please call customer service at: 1(800) 798-7398.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
SWEEPER WILL NOT OPERATE	1. Batteries discharged. 2. No power in electrical outlet supplying charging adapter. 3. Unit needs servicing.	1. Charge unit. 2. Check fuse or breaker. Replace fuse/reset breaker. 3. Call Customer Service at 1 (800) 798-7398.
SWEEPER WILL NOT PICK-UP	1. Dust container is full. 2. Unit needs recharging.	1. Empty dust container. 2. Charge unit.
DUST ESCAPING FROM SWEEPER	1. Dust container is full.	1. Empty dust container.
ROTATING BRUSH WILL NOT PICK UP	1. Unit clogged. 2. Dust container is full.	1. Check for excessive material on brush or in bottom of sweeper. Remove obstruction from brushes and/or sweeper. 2. Empty and clean dust container.
SWEEPER WILL NOT CHARGE	1. Electrical outlet not working. 2. Charging adapter not working. 3. Batteries no longer functioning. 4. Unit left in "On" position.	1. Check to ensure outlet is working properly. (Easily checked by plugging in another appliance. 2. Replace charging adapter. 3. See battery disposal instructions. 4. Press switch to "Off".

Model V1935Q

EURO-PRO®

ONE (1) YEAR LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions.
If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid. For Customer Service support, call 1(800) 798-7398.

If the appliance is found to be defective in material or workmanship, ***EURO-PRO Operating LLC*** will repair or replace it free of charge. Proof of purchase date and $ 7.95 to cover the cost of return shipping and handling must be included. *

Non-durable parts including, without limitation, dust cups and brushes which normally require replacement are specifically excluded from warranty.

The liability of ***EURO-PRO Operating LLC*** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by ***EURO-PRO Operating LLC***.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of ***EURO-PRO Operating LLC*** if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is ***EURO-PRO Operating LLC*** liable for incidental or consequential damages of any nature whatsoever. Some states/provinces do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

***Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**

OWNERSHIP REGISTRATION CARD

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

RETURN TO*: EURO-PRO Operating LLC*, 4400 Bois Franc, St Laurent, Qc, H4S 1A7

V1935Q

Appliance model _____

Date purchased **Name of store** _____

Owner's name _____

Address **City** **State** **Zip Code** _____

Printed in China

MEDIDAS IMPORTANTES DE SEGURIDAD

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR SU BARREDORA INALÁMBRICA.

Al usar aparatos eléctricos, siempre debe seguir precauciones básicas de seguridad, incluyendo las siguientes:

ADVERTENCIA: Para reducir el riesgo de incendio, descarga eléctrica o daños personales:

1. No recargue esta unidad en el exterior.
2. No la utilice en el exterior o en superficies húmedas.
3. No permita que se utilice como un juguete. Debe tener mucho cuidado al ser utilizada por o cerca de niños.
4. Utilícela solamente como se indica en este manual. Use únicamente los accesorios recomendados por el fabricante accesorios.
5. No usar si el cable o el enchufe están dañados. No utilice la barredora inalámbrica si se ha caído, dañado, dejado en el exterior o tirado al agua. Retórnela a ***EURO-PRO Operating LLC*** para su examen, reparación o ajuste.
6. No maltrate el cable del cargador. Nunca levante el cargador o la base por el cable, o tire del cable para desconectarlo del tomacorriente; agárrelo por el cargador y tire para desconectarlo.
7. Mantenga el cargador alejado de superficies calientes.
8. Este producto incluye baterías recargables de níquel cadmio. Las baterías deben descartarse o reciclarse de forma apropiada. **No arroje las baterías al fuego o las exponga a altas temperaturas** ya que pueden explotar.
9. No toque el enchufe o el artefacto con las manos húmedas.
10. No introduzca ningún objeto en las ranuras. No la use con ninguna abertura tapada; manténgalas libres de polvo, pelusa, pelos y cualquier otra cosa que pudiera reducir el flujo de aire.
11. Mantenga el cabello, la ropa suelta, los dedos y toda parte del cuerpo alejados de las aberturas y de las partes móviles.
12. No recoja nada que se esté quemando o echando humo, como cigarrillos, fósforos, o cenizas calientes.
13. No intente cambiar ningún accesorio mientras la unidad está funcionando.
14. Tenga especial cuidado al limpiar escaleras.
15. No la use para recoger líquidos inflamables o combustibles como gasolina ni la use en áreas donde puedan estar presentes.
16. Lea y siga todas las indicaciones de las etiquetas y de operación.
17. No utilice el cargador con un cable de extensión. Enchufe el cargador directamente en un tomacorriente. Use el cargador únicamente en un tomacorriente común (120V, 60Hz).
18. **No use la barredora inalámbrica sin el recipiente colector de tierra instalado.**
19. Guarde la barredora inalámbrica dentro de su casa. Guárdela luego de usarla para evitar accidentes.
20. Bajo condiciones extremas, las baterías pueden presentar pérdidas. Si el líquido, que es una solución de 20-35% hidróxido de potasio, entra en contacto con la piel, lávese inmediatamente con agua y jabón o neutralícelo con un ácido suave como jugo de limón o vinagre. Si el líquido le entra en los ojos, enjuaguuelos inmediatamente con agua limpia durante 10 minutos como mínimo y vea un doctor.
21. Uzéela solamente en superficies secas, en interiores.
22. No la utilice con ningún propósito que no esté descrito en este manual del usuario.
23. No intente usar el cargador con ningún otro producto o intente recargar este producto con otro cargador. **Use únicamente el cargador modelo KA12D075015023U suministrado con este artefacto.**
24. Este artefacto debe desenchufarse del tomacorriente antes de quitarle la batería.

CONSERVE ESTAS INSTRUCCIONES

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR SU BARREDORA INALÁMBRICA

PARA USO DOMÉSTICO SOLAMENTE

Rev. 08/08

PARTES Y COMPONENTES

1. **Cabezal eléctrico de la barredora**
2. **Llave de encendido**
3. **Luz indicadora de carga**
4. **Recipiente para tierra**
5. **Cepillo giratorio**
6. **Cubierta Transparente del Cepillo**
7. **Mango inferior**
8. **Tubo de extensión del mango inferior**
9. **Pivote de plegado**
10. **Mango superior**
11. **Cargador**
12. **Enchufe de carga**

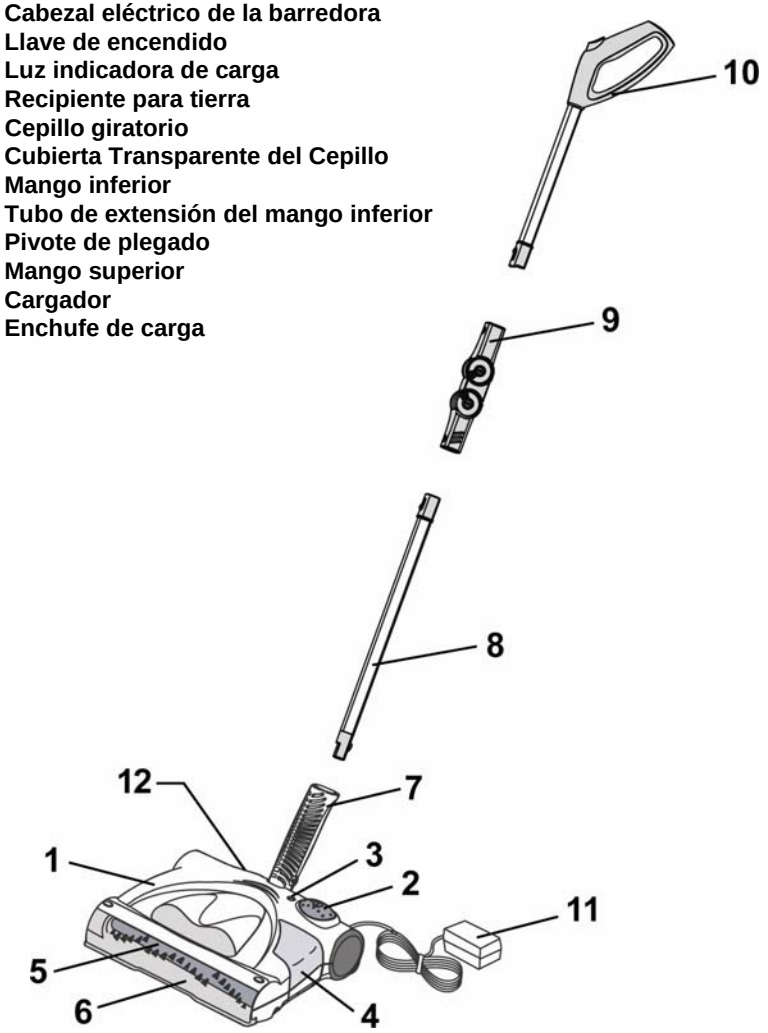

*** El dibujo puede no ser igual al producto real.**

NOTA: La barredora inalámbrica Modelo V1935Q viene con la batería descargada. Necesita cargar la unidad por 20 horas antes de usarla por primera vez. Use la batería de repuesto # X1725QN únicamente.

Armado de su Barredora Inalámbrica

Antes de comenzar:
Su barredora inalámbrica requiere muy poco armado. Deberá sacarla de la caja y familiarizarse con todos los componentes listados en el diagrama descriptivo. (Pág. 12) Esto le ayudará en el armado y operación de su barredora inalámbrica.

NOTA: El cargador puede estar empacado dentro del recipiente para la tierra.

1. Inserte el mango inferior en el cabezal eléctrico. Ajústelo con la tuerca insertada y el perno suministrado. (Fig. 1) El perno y la tuerca de retención vienen colocados en el extremo donde hay que insertar el mango inferior.

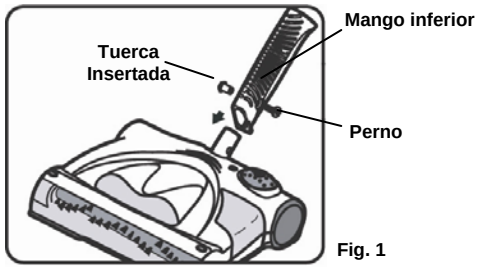

Fig. 1

2. Arme el mango insertando el tubo de extensión del mango inferior dentro del mango inferior. Empujuelo hasta que se trabe en su lugar. Luego, coloque el pivote plástico de plegado sobre el tubo de extensión del mango inferior y empujuelo hasta que se trabe en su lugar. Finalmente, inserte el mango superior dentro de la bisagra de plegado hasta que se trabe en su lugar. (Fig. 2)
3. Coloque el mango en la posición vertical de almacenamiento.
4. Conecte el cargador al enchufe de carga del cabezal eléctrico de la barredora. Enchufe el cargador en un tomacorriente común (120V, 60Hz). La luz verde indicadora de carga se encenderá. Si la luz indicadora de carga no se enciende, presione una vez el botón de encendido.

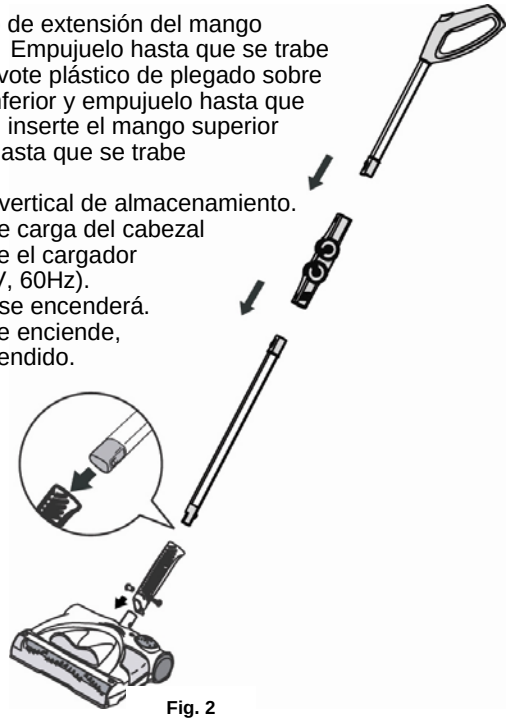
Fig. 2

CUIDADO: SIEMPRE USE (ÚNICAMENTE) EL CARGADOR SUMINISTRADO CON LA BARREDORA.

Cómo Usar su Barredora inalámbrica

NOTA: Antes de usarla, asegúrese de que la barredora inalámbrica haya sido cargada inicialmente durante 20 horas.
Su barredora inalámbrica funcionará correctamente sólo cuando la batería esté completamente cargada. Su barredora funcionará durante un tiempo variable con una carga completa. Esto dependerá del tipo de superficie que limpie. (Durará más en pisos lisos que en alfombras).

1. Presione el botón de encendido para hacer funcionar la unidad. Para apagarla, presione nuevamente el botón. (Fig. 3)

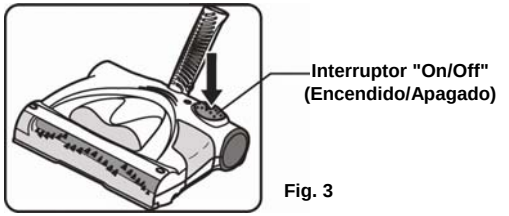

Fig. 3

CUIDADO: No debe guardarse ni colocarse ningún artefacto eléctrico o electrónico en zonas con mucho calor o humedad. NO guarde su barredora inalámbrica cerca de cocinas, radiadores, calefactores o en un baño o lugares para bañarse.

2. Para plegar el mango, presione el botón de liberación del mango mientras empuja el mango hacia delante. El pivote de plegado se trabará en la posición plegada. (Fig. 4)
3. Para enderezar el mango, simplemente levante el mango superior. El pivote de plegado se trabará en la posición desplegada. (Fig. 5)

Fig. 4

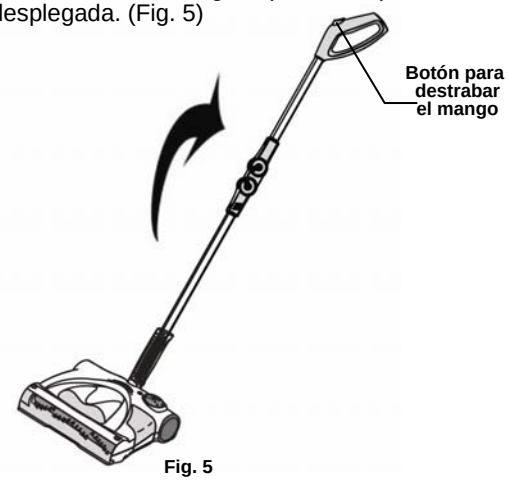

Fig. 5

Limpieza del Recipiente de la Tierra

Para obtener el mejor rendimiento, limpie el recipiente para la tierra luego de cada uso.

1. Tire del recipiente para la tierra hacia fuera desde el costado. (Fig. 6)

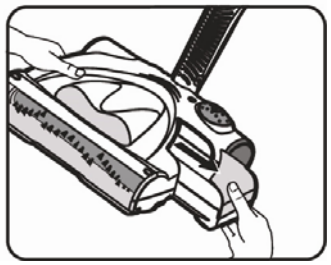

Fig. 6

2. Vacíe el contenido del recipiente para la tierra. (Fig. 7) Si lo desea, puede enjuagarlo con agua, pero debe secarlo completamente antes de colocarlo nuevamente en la barredora.

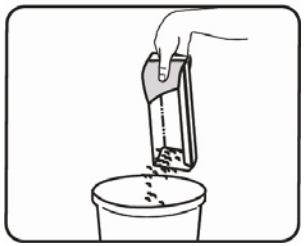

Fig. 7

3. Vuelva a colocar el recipiente para la tierra en la barredora.
4. De vez en cuando, quite la cubierta transparente del cepillo del frente de la barredora y saque la acumulación de pelusa, pelos o fibras del cepillo giratorio. Para quitar la cubierta, agárrela por debajo, tire hacia fuera y hacia abajo hasta que se desenganche de las ranuras laterales y de las pestañas de la parte superior. (Fig. 8)

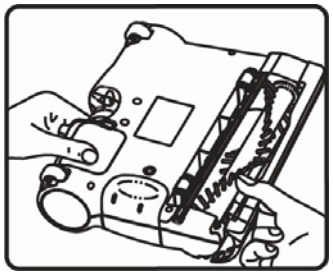

Fig. 8

CUIDADO: No encienda la unidad accidentalmente mientras la limpia. No limpie la unidad mientras se esté cargando.

Recarga de la Barredora Inalámbrica

1. Conecte el enchufe del cargador en el conector o agujero en la parte posterior de la barredora. Enchufe el cargador en un tomacorriente. (120V., 60Hz.) Use únicamente el cargador KA12D075015023U. (Fig. 9)
2. Esta barredora inalámbrica contiene baterías de Ni-Cd. Antes de usarla por primera vez, debe cargarse durante 20 horas como mínimo.

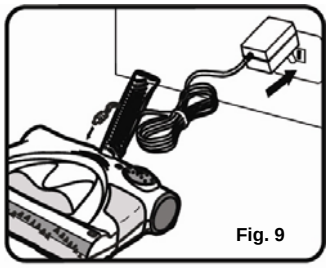

Fig. 9

IMPORTANTE: Luego de la carga inicial, su nueva barredora inalámbrica no debe quedar conectada al cargador por más de 24 horas. El ciclo normal de carga es de aproximadamente 20 horas. El fabricante recomienda que al cargar la barredora inalámbrica, la deje cargando durante 20 horas y luego la desconecte del cargador. El cargador debe desenchufarse del tomacorriente y guardarse en un lugar apropiado hasta su nuevo uso.

3. Al cargar la unidad, el botón de encendido debe estar en la posición "Off" (Apagado).
4. La luz indicadora de carga en la parte superior de la barredora se encenderá para indicar que la misma se está cargando.
5. Para recargar, repita el paso #1 anterior. Los tiempos de carga variarán dependiendo del uso entre los ciclos de carga.

NOTA: Si cuando conecta la unidad para que se recargue NO enciende la luz indicadora de recarga, presione el botón de encendido (On/Off) una vez para apagar la unidad. Ahora debe prenderse la luz indicadora de carga.

NOTA: Se alcanzará el rendimiento máximo únicamente luego de haber cargado y descargado la unidad dos (2) o tres (3) veces.

IMPORTANTE: Para mantener el máximo rendimiento de su barredora inalámbrica, se recomienda descargar completamente la unidad, luego recargarla completamente por lo menos una vez por mes.

CUIDADO: Use únicamente la batería suministrada con la unidad.
No intente remover la batería de la unidad para recargarla.
Nunca arroje la batería o la unidad al fuego.
No intente remover o dañar la cubierta de la batería.
La batería debe ser reciclada o desechada apropiadamente al final de su vida útil.

Para maximizar la vida útil de sus baterías de NiCd:

1. Cárguelas por un mínimo de 20 horas antes de usarlas por primera vez. El no hacer esto reducirá considerablemente la vida útil de las baterías.
2. No guarde la unidad con el cargador conectado y enchufado.
3. Cárguelas únicamente cuando las baterías estén completamente descargadas (o lo más cerca posible a completamente descargadas).
4. No las guarde en áreas de alta temperatura o humedad.
5. Luego de guardarlo por tres (3) meses, deberá descargar completamente el producto y luego recargarlo para maximizar el poder de las baterías.
6. Use únicamente el cargador suministrado con el producto. Si utiliza otros cargadores, las baterías pueden llegar a fallar causando daños a las baterías, el producto o la propiedad privada. Las baterías de NiCd tienen una larga vida útil pero deberá reemplazarlas en cierto momento. Para comprar baterías de reemplazo, la llamada 1 (800) 798-7398.

NOTA:

1. **El botón de encendido deberá estar en la posición 'Off' (apagado) para cargar la unidad. Si la luz indicadora de carga no se enciende, presione una vez el botón de encendido.**
2. **Si nunca ha usado el producto, o estuvo guardado por mucho tiempo sin usarse, requerirá varios ciclos completos de carga y descarga para obtener el tiempo total de funcionamiento de su producto.**

Extracción y Descarte de la Batería

NOTA: Si no está seguro de cómo extraer la batería, le sugerimos que lleve su barredora a un técnico calificado en reparación de artefactos pequeños para que lo haga por usted.

Esta barredora está equipada con una batería de Ni-Cd y necesita descartarla correctamente. Cuando la batería no funcione más, debe ser extraída de la barredora para ser descartada. No extraiga la batería por ningún otro motivo que no sea su descarte. La batería debe ser reciclada o descartada de acuerdo con las normas locales. Consulte sus Páginas Amarillas o centro de reciclado local por mayor información.

ADVERTENCIA: **Nunca use baterías comunes como reemplazo ya que pueden perder y causar daños. Use únicamente la batería X1725QN como repuesto.**

Extracción de la Batería

1. De vuelta la unidad de modo que la base quede mirando hacia arriba. Tenga cuidado de no encender accidentalmente la unidad. (Fig. 10)
2. Presione la traba y levante la tapa del compartimiento de la batería. (Fig. 11)
3. Levante las baterías, desenchufe su conector y déjelas a un lado.
4. Enchufe el conector de las baterías nuevas y colóquelas dentro de la unidad. Vuelva a colocar la tapa del compartimiento de la batería verificando que haya quedado trabada en su lugar.

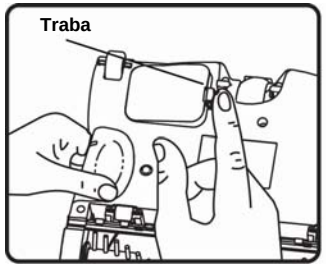

Fig. 10

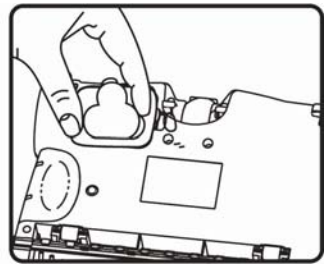

Fig. 11

CUIDADO: Este artefacto contiene baterías de Ni-Cd. La batería debe ser reciclada o descartada de acuerdo con las normas locales. Consulte sus Páginas Amarillas o centro de reciclado local por mayor información.

Cuidado y Mantenimiento

Para mantener el rendimiento y la vida útil de su unidad, le recomendamos lo siguiente:

1. Limpie la unidad con un trapo seco una vez por mes, incluyendo el compartimiento donde se coloca el recipiente para la tierra. Quite los pelos, fibras y cualquier otro material que se haya acumulado en el compartimiento o en el cepillo giratorio.
2. No utilice materiales abrasivos para limpiar la barredora. No sumerja la unidad en agua.
3. No la use para recoger líquidos o sobre pisos mojados.
4. No la use en concreto, alquitrán o superficies ásperas similares.
5. No recoja trozos de soga o tela con la barredora.
6. No limpie alfombras adornadas con borlas o deshilachadas con la barredora.
7. Cualquier otro mantenimiento debe ser realizado por un representante técnico autorizado. Llame al Servicio al Cliente al 1 (800) 798-7398.

GUÍA DE SOLUCIÓN DE PROBLEMAS

PROBLEMA	POSIBLE CAUSA	POSIBLE SOLUCIÓN
BARREDORA NO FUNCIONA	1. Batería descargada. 2. El tomacorriente donde enchufa el cargador no funciona. 3. La unidad necesita ser reparada.	1. Recargue la unidad. 2. Verifique el fusible o la llave general. Reemplace el fusible/encienda la llave general. 3. Llame al Servicio al Cliente al 1 (800) 798-7398.
LA BARREDORA NO RECOGE	1. Recipiente para la tierra está lleno. 2. La unidad necesita una recarga.	1. Vacíe el recipiente para la tierra. 2. Recargue la unidad.
SALE TIERRA DE LA BARREDORA	1. Recipiente para la tierra está lleno.	1. Vacíe el recipiente para la tierra.
CEPILLO GIRATORIO NO RECOGE	1. Unidad tapada. 2. Recipiente para la tierra está lleno.	1. Verifique que no haya material acumulado en el cepillo o debajo de la barredora. Quite las obstrucciones del cepillo y/o de la barredora. 2. Vacíe y limpie el recipiente para la tierra.
BARREDORA NO SE RECARGA	1. El tomacorriente donde enchufa el cargador no funciona. 2. El cargador no funciona. 3. La batería no funciona más. 4. Ha dejado la unidad encendida.	1. Verifique que el tomacorriente funcione correctamente. (Verifíquelo fácilmente enchufando otro artefacto). 2. Reemplace el cargador. 3. Vea cómo desechar la batería. 4. Apague la unidad.

Modelo V1935Q

EURO-PRO

GARANTÍA LIMITADA DE UN (1) AÑO

EURO-PRO Operating LLC garantiza este producto contra defectos de materiales y mano de obra por un término de un (1) año a partir de la fecha de compra original, siempre que sea utilizado para uso doméstico normal, sujeto a las siguientes condiciones, exclusiones y excepciones.
Si su artefacto no funciona correctamente al utilizarlo bajo condiciones domésticas normales dentro del período de garantía, devuelva el artefacto completo y los accesorios, pagando el envío. Por servicio al cliente, llame al 1 (800) 798-7398.

Si el artefacto presenta un defecto de materiales o mano de obra, ***EURO-PRO Operating LLC*** lo reparará o remplazará sin cargo. El envío debe incluir un comprobante de la fecha de compra y $ 7,95 para cubrir los gastos de envío. *

Los insumos tales como, sin limitación, filtros y cepillos los que normalmente necesitan ser reemplazados son explícitamente excluidos de la garantía.

La responsabilidad de ***EURO-PRO Operating LLC*** se limita únicamente al costo de reparación o reemplazo de la unidad, a nuestro criterio. Esta garantía no cubre el desgaste normal de las partes y no cubre ninguna unidad que haya sido alterada o utilizada con fines comerciales. Esta garantía limitada no cubre daños ocasionados por uso inadecuado, abuso, negligencia o daños causados por embalaje inapropiado o maltrato durante el transporte. Esta garantía no cubre daños o defectos causados o resultantes durante el transporte para su reparación o alteraciones del producto o cualquiera de sus partes, realizadas por una persona no autorizada por ***EURO-PRO Operating LLC***.

Esta garantía es válida para el comprador original del producto y excluye cualquier otra garantía legal y/o convencional. La responsabilidad de ***EURO-PRO Operating LLC***, de existir, se limita a las obligaciones específicas asumidas expresamente bajo los términos de esta garantía limitada. Bajo ninguna circunstancia ***EURO-PRO Operating LLC*** será responsable por daños incidentales o indirectos de ninguna clase. Algunos estados/provincias no permiten la exclusión o limitación de daños consiguientes o incidentales, por lo tanto lo anterior puede no ser válido para usted.

Esta garantía le otorga derechos legales específicos, y usted puede también tener otros derechos los que varían de estado a estado o de provincia a provincia.

***Importante: Embale el producto cuidadosamente para evitar daños durante el transporte. Asegúrese de incluir un comprobante de la fecha de compra y de colocarle una etiqueta al producto con su nombre, dirección completa y número de teléfono, una nota proporcionando información de la compra, número de modelo y una descripción del problema. Le recomendamos asegurar el paquete (puesto que la garantía no cubre daños de envío). Escriba en el exterior del paquete "ATTENTION CUSTOMER SERVICE". Nosotros nos esforzamos constantemente en mejorar nuestros productos, por lo tanto las especificaciones aquí indicadas pueden cambiar sin previo aviso.**

TARJETA DE REGISTRO DEL CLIENTE

Complete y envíe la tarjeta de registro del producto dentro de los diez (10) días posteriores a la compra. El registro nos permitirá contactarnos con usted en caso de existir alguna notificación de seguridad con respecto al producto. Retornando esta tarjeta usted reconoce haber leído y entendido las instrucciones de uso y advertencias incluidas en estas instrucciones.
ENVIAR A*: EURO-PRO Operating LLC*, 4400 Bois Franc, St Laurent, Qc, H4S 1A7

V1935Q

Modelo del Artefacto

Fecha de compra **Nombre del Negocio**

Nombre del Dueño

Dirección **Ciudad** **Estado** **Código Postal**

Impreso en China